



Available finish: Anthracite Only

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP65

These fittings are Class I and must be Earthed

Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances:

Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -15°C - +40°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Important User Advice

Always switch off mains supply before servicing.

Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing.

To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit.

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

Installation Procedure

Familiarize yourself with the fixture, remove the four screws that secure the main fitting to the mounting plate.

Set aside the screws and rubber washers.



Offer the base plate up to a suitable surface and mark the two fixing points, ensuring the cable entry is towards the bottom of the plate.

Once drilled, dress the mains supply cable through the grommet and secure to the wall. To make installation easier remove the rubber grommet from the housing.



Terminate the fixed wiring into the terminal block, following the guide below and/or the markings on the fitting.

Ensure the main gasket is seated correctly on the base plate and place the fitting onto it, Reinstall the four fixing screws, tighten and install the four screw caps supplied.

Turn on the power and test the luminaire.

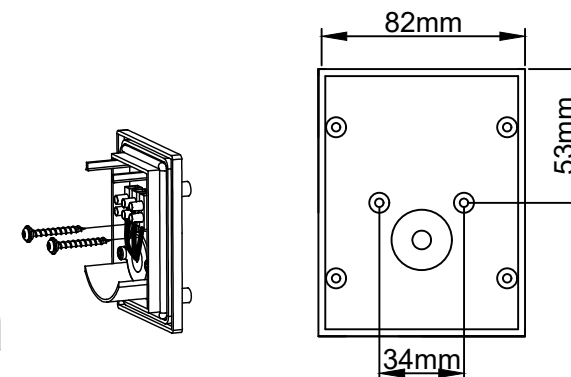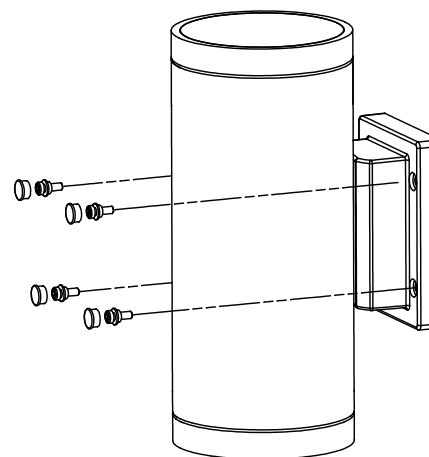

Mounting Plate

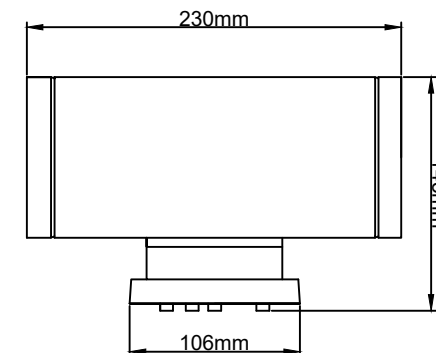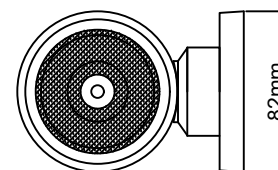

Mains Supply		Luminaire
Live - Brown		L- Brown
Earth - Green/Yellow		⊕ - Green/Yellow
Neutral - Blue		N - Blue

Lamp Details

2X 9W LED Non Replaceable Module
3000K Warm White
CRI: Ra82
1700 Lumens (850 Up - 850 Down)



KSR Lighting Aftersales: 023 92 674343

E-mail: aftersales@ksrlighting.com

*These products contain a light source of energy efficiency class E
The LED light source and Control Gear in this product can not be
replaced; when the light source reaches the end of its life the
whole luminaire shall be replaced*