# **Installation Sheet**

installation to retain for future reference/maintainence.

KSR1286-87

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after



Available Finishes: 316 Stainless Steel

# 

# These fittings are Class I and require an Earth connection

## **Important Information**

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -20 ~ +40°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

#### **General Maintenance**

These products are suitable for external use, general maintenance and cleaning should be performed at least quarterly.

Clean product outer using a damp cloth, do not use abrasive cleaners as this may damage the finish. After any maintenance, remember to check all seals are intact. Always switch off mains supply before servicing.

Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing.

To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit.

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

### **Installation Procedure**

Ensure mains supply is turned off.

 
Locate luminaire, Remove base by unscrewing 2x screws.


Place base on desired location locate and drill holes for wall plugs and fix back plate to wall using suitable fixings. Terminate the wiring into teh terminal block as follows: L-Live (Brown), N-Neutral (Blue) & Earth - (Green/Yellow) as per Fig 2.This luminaire must be earthed.


Pass wire through grommet and fix fitting to base, replace 2x screws removed in first stage. Ensure sealign washers are replaced and in place.

Turn on mains supply and test.

# Fig 1.



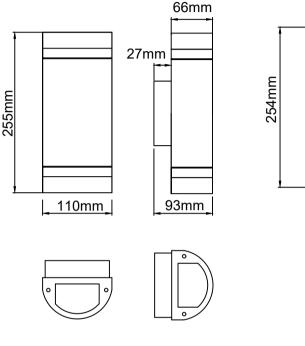

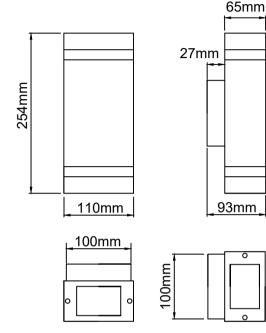

**KSR1286** 

KSR1287



## Lamp Details

Lamp Colour: 3000K Lamp Cap: LED Lumen Output: 262lm LED Wattage: 2 x 3w

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced

This product contains a light source of energy efficiency class F

