



Available Finishes: KSR1360 - Stainless Steel  
KSR1361 - Anthracite

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP44 240VAC~50Hz 2x 5W

These fittings are Class I and must be Earthed

## Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply. Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -20 ~ +40°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

## General Maintenance

These products are suitable for external use, general maintenance and cleaning should be performed at least quarterly. Clean product outer using a damp cloth, do not use abrasive cleaners as this may damage the finish. After any maintenance, remember to check all seals are intact. Always switch off mains supply before servicing. Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing. To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit. At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

## Installation Procedure

KSR recommends that you familiarise yourself with the installation. Once you are satisfied: Make sure the mains supply is turned off.

Remove back plate by slackening off screws (one each side).

Bring cable through grommet on back plate and fix plate in position using suitable fixings for the material being fixed to. Making sure the plate is level. Fixing centres (Fig. 1)

Connect to mains supply (Fig. 2)

Attach luminaire to back plate and tighten retaining screws.

Turn on mains supply and test luminaire is working correctly.

**Note:** To keep your luminaire in top condition KSR recommend cleaning with hot soapy water every 2-3 months and re-greasing of bolts to prevent corrosion.

Fig. 1




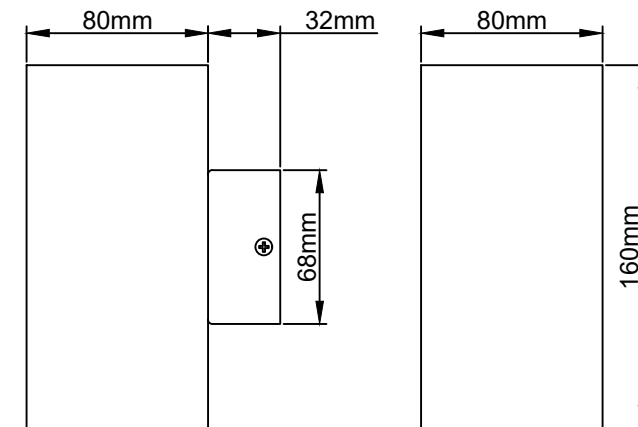


Fig. 2

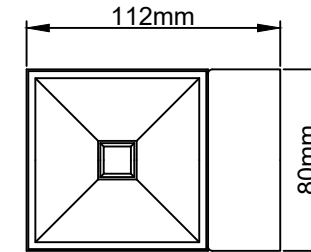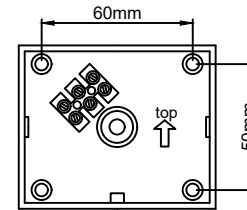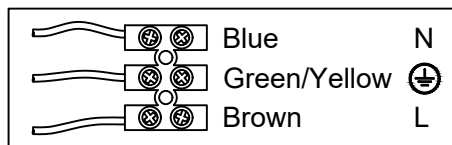

	Body Colour	LED Wattage	LED Colour	Lumens
KSR1360	Stainless Steel	2x 5W	4000K	2x 444
KSR1361	Anthracite	2x 5W	4000K	2x 444

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced

This product contains a light source of energy efficiency class F

KSR Lighting Aftersales: 023 92 674343

E-mail: aftersales@ksrlighting.com