

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP66     **240V~50Hz 26W**

These fittings are Class I and must be Earthed

Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -10 - +30°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Important User Advice

Always switch off mains supply before servicing.

This luminaire is suitable for outdoor use and requires regular cleaning maintenance to preserve the products finish and light output. Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing.

To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit.

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation

Installation Procedure

Familiarize yourself with the luminaire/installation procedure and ensure the power is safely isolated before installing the luminaire.

Locate suitable area(s) for the installation

Release 4 fixing screws holding the base plate onto the main body, when these are released base plate should come away from body

Terminate the wiring L-Live (Brown), N-Neutral (Blue) and E-Earth (Green/Yellow) into terminal block

Now pull supply cable through cable gland provided, and tighten gland to seal connection

If loop in loop out wiring is required please use secondary opening located next to cable gland fitted and using the extra cable gland provided follow previous steps

After connections are made replace cover onto base of body and fasten the 4 fixing screws removed in the first stage

Using suitable fixings drill and prepare three fixing holes for the base plate to locate onto.

When the base plate is in place over the holes prepared fasten in place using screwdriver or electric drill

Adjust head to point in the desired direction, adjusting with the Allen key provided.

Turn on the power and test the luminaire.

Lamp Details



26W LED Module, 2700 Lumens

3000K Warm White

**The light source of this luminaire is not replaceable;
when the light source reaches its end of life the whole
luminaire shall be replaced**



Available finish:- Anthracite

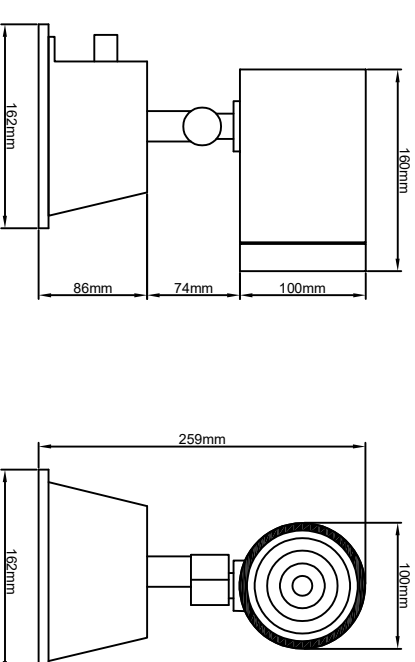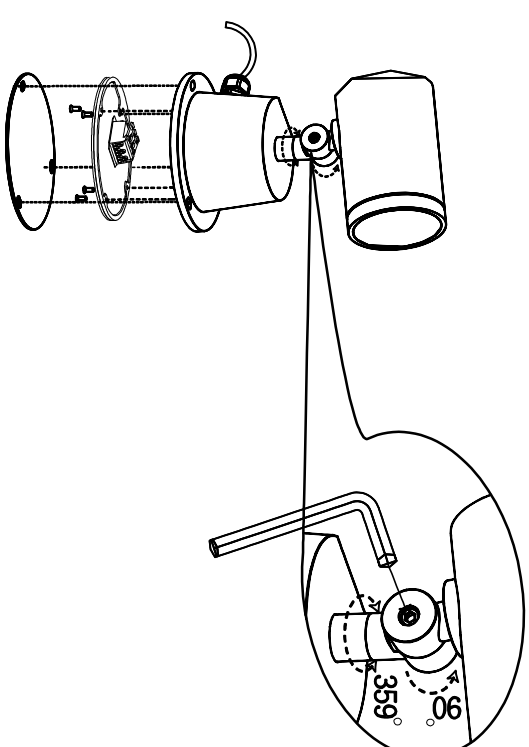

KSR Lighting Aftersales: 023 92 674343
E-mail: aftersales@ksrlighting.com

