Installation Sheet) KSR9840-9845

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence

IP20 ⊕ 😘 🕻 € (]0.3m||6 240V~50Hz | 23-65W

These fittings are Class I and must be Earthed

Important Information

control. These products are designed for connection to a 240V~50Hz supply. ensuring the installation complies with current IEE wiring regulations & local building It is recommended that these luminaires are installed and fitted by a qualified electrician

Any faulty, broken or damaged luminaires should be replaced immediately

KSR will not accept responsibility for any claims arising from a poor installation.

system or physical abuse as well as failure related to workmanship in the installation of the products or parts temperature (normal operating ambient temperature -10 - +25°C), humidity conditions, fluctuations in the electrical end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer

Important User Advice

Always switch off mains supply before servicing.

This luminaire is suitable for indoor use only and should not be fitted to damp or wet

surfaces such as freshly plastered or painted walls.

that maybe damaged by high test voltages, they must be disconnected from the circuit before testing. Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components

accordance with local legislation At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit

Installation Procedure

Familiarize yourself with the luminaire/installation procedure and ensure the power is safely isolated before installing the luminaire.

Separate the LED/Diffuser plate from the main body by pulling apart from one end

The wiring and support straps are disconnected for ease of installation.

Offer the main body up to the ceiling and mark the fixing points. if using surface conduit ensure the beza boxes are at

Drill and secure the main body in place, dressing the supply cable though either of the three rear entry points or end

Connect the LED supply wire and earth connections, then snap the LED plate onto the main body, ensuring it is Offer up the LEDs and connect the two support straps in the main body to the two tags on the LED tray Connect the mains wiring as per the guide below, Brown (L) Live, Blue (N) Neutral and Green/Yellow (G/Y) Earth.

properly located along the whole length. Turn on the power and test the luminaire.

LEDs are an inductive load so avoid unwanted MCB tripping it may be necessary to uprate your breakers to a C type.

Mains Supply Luminaire


Live - Brown () L- Brown
Earth - Green/Yellow () - Green/Yellow
Neutral - Blue () N - Blue





Navara X

LED Batten

  Available finish:- White





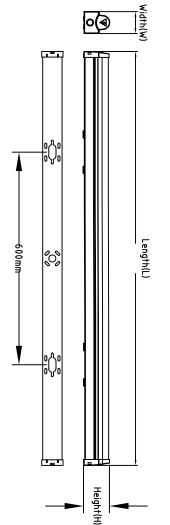

Lamp Details	ls				
Product Code	Description	Dimensions L x W x H	Wattage	Colour	Lumens
KSR9840	Navara X-4S	1168mm x 62mm x 75mm	23W	4000K	2760
KSR9841	Navara X-4T	1168mm x 62mm x 75mm	40W	4000K	4800
KSR9842	Navara X-5S	1457mm x 62mm x 75mm	38W	4000K	4560
KSR9843	Navara X-5T	1457mm x 62mm x 75mm	60W	4000K	7200
KSR9844	Navara X-6S	1727mm x 62mm x 75mm	48W	4000K	5760
KSR9845	Navara X-6T	1727mm x 62mm x 75mm	65W	4000K	7800

The light source of this luminaire is not replaceable; when the light source reaches its end of life the light source and control gear shall be replaced

This product contains a light source of energy efficiency class D

KSR Lighting Aftersales: 023 92 674343

E-mail: aftersales@ksrlighting.com