Installation Sheet) KSR1238/40

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence.

IP44 ⊕ 💃 (€ (]0.3m / 240VAC~50Hz 2.9W

These fittings are Class I and must be Earthed

Important Information

control. These products are designed for connection to a 240V~50Hz supply. ensuring the installation complies with current IEE wiring regulations & local building It is recommended that these luminaires are installed and fitted by a qualified electrician

Any faulty, broken or damaged luminaires should be replaced immediately

KSR will not accept responsibility for any claims arising from a poor installation

damage, adverse temperature (normal operating ambient temperature -20 \sim +40°C), humidity conditions installer, end user or any third party to exercise caution to protect any covered product or part from outside Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the

fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts

General Maintenance

These products are suitable for external use, general maintenance and cleaning should be performed at least

maintenance, remember to check all seals are intact. Always switch off mains supply before servicing Clean product outer using a damp cloth, do not use abrasive cleaners as this may damage the finish. After any

Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit

Installation Procedure

Familiarize yourself with the luminaire, and ensure the mains power is turned off before

Remove the front cover and glass diffuser from the fitting

 
Offer the luminaire up and mark the two fixing points, taking care not to damage other services drill the fixing holes

Feed the mains supply cable through the grommet and secure the luminaire to the wall

secured to the body of the luminaire using the dedicated connection point Terminate the wiring into the terminal block, ensuring correct polarity. Ensure the earth cable is

Replace the diffuser and front rim, do not overtighten these screws or distort the gasket

Turn on the power and test the luminaire.







Coruna I & II (




Surface LED Wall Lights

Available finish:- Anthracite Finish

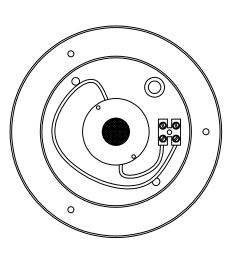

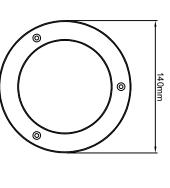

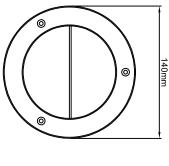

KSR1238



KSR1240

Output Details
KSR1238/40- 3W Integral LED Module

KSR1238 - 2.9w 195lm 6000k Cool White KSR1240 (Eyelid Version) - 2.9w 64lm

the light source reaches its end of life the whole luminaire The light source of this luminaire is not replaceable; when

This product contains a light source of energy efficiency class G

E-mail: attersales@ksrlighting.com KSR Lighting Aftersales: 023 92 674343