

Installation Sheet KSR1298-99

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP44 UK CA € 240V 1.8W

These fittings are Class II and do not require an Earth connection

Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply. Any faulty, broken or damaged luminaires should be replaced immediately. KSR will not accept responsibility for any claims arising from a poor installation. Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -20 ~ +40°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

General Maintenance

These products are suitable for external use, general maintenance and cleaning should be performed at least quarterly. Clean product outer using a damp cloth, do not use abrasive cleaners as this may damage the finish. After any maintenance, remember to check all seals are intact. Always switch off mains supply before servicing. Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing. To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit. At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

Installation Procedure

 
 
- Familiarize yourself with the luminaire and ensure the power is turned off before installing the fitting.
- Remove screws from bracket and proceed to use bracket as template.
- Fix to required location with suitable fixings.
- Remove screws and cover.
- Terminate wiring to the circuit board using terminal. (Brown - Live and Blue - Neutral).
- Proceed to pull cable through grommet by making a small insertion into grommet opening (it is advised not to use a cutting knife as this may prevent the cable being gripped by the grommet)
- Ensure grommet is intact when you feed wire through.
- Replace cover.
- Fasten luminaire to bracket using both screws removed in the first stage and tighten screws.
- Turn on mains supply and test.

Salta I & II





Surface Wall light

Available finish:- Anthracite

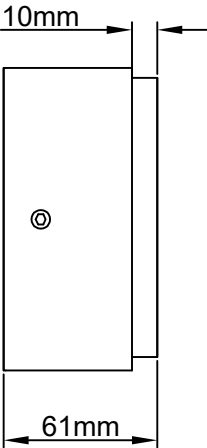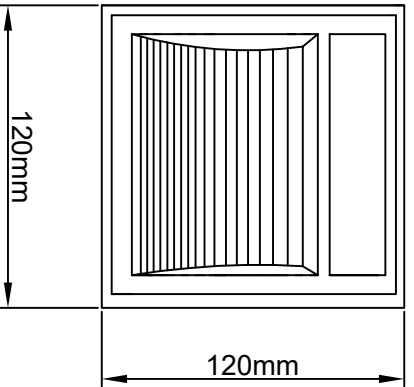

KSR1298

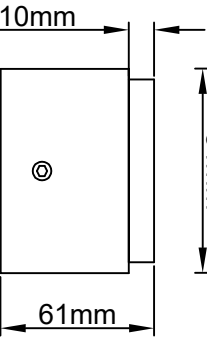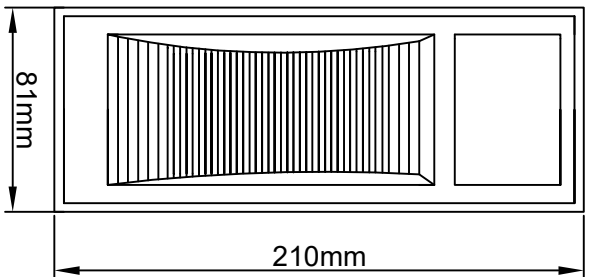  

KSR1299

Lamp Details	
<div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div></div>	
LED Wattage: 1.8w LED Module	
KSR1298C/WHT - 6000K Cool White LED - 41 lumen	
KSR1299C/WHT - 6000K Cool White LED - 20 lumen	
The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced	

This product contains a light source of energy efficiency class G



KSR Lighting After-sales: 023 92 67 43 43
E-mail: aftersales@ksrlighting.com