### Installation Sheet ) KSR1340

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence.

# Tulua III 🕻 🖁 🕽 🕽 GU10 Stainless Steel Range Available finish: - 304 Stainless Steel

 
60mm

60mm

These fittings are Class I and must be Earthed IP44 ⊕ 💃 🤇 € (]0.5m 🖟 240VAC~50Hz 35W Max

### Important Information

ensuring the installation complies with current IEE wiring regulations & local building fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation damage, adverse temperature (normal operating ambient temperature -20  $\sim$  +40°C), humidity conditions, installer, end user or any third party to exercise caution to protect any covered product or part from outside control. These products are designed for connection to a 240V~50Hz supply. It is recommended that these luminaires are installed and fitted by a qualified electrician Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the KSR will not accept responsibility for any claims arising from a poor installation Any faulty, broken or damaged luminaires should be replaced immediately.



182mm

102mm

Base Section This Way Up

26mm

## General Maintenance

of the products or parts.

maintenance or lamp replacement, remember to check all seals are intact. Clean product outer using a damp cloth, dried and buffed to a shine. As a raw finished material atmospheric General maintenance and cleaning should be performed at least quarterly deposits may build up on the surface, this can be cleaned off to return the product to it's original look. After any

#### Installation Procedure

fitting to the mounting plate. Familiarize yourself with the luminaire, remove the two chrome dome nuts that secure the main

Set aside the dome nuts.

Offer the base plate up to a suitable surface and mark the four fixing points, ensuring the drain holes at the bottom of the plate.

 
Ensure the main gasket is seated correctly on the base plate and place the fitting onto it, refit and tighten the dome nuts Once drilled, dress the mains supply cable through the grommet and secure to the wall Terminate the mains supply into the terminal block, following the markings on the fitting

enclosed housings. Refit the cap, please check it is secure to ensure a good seal Remove the cap and fit GU10 lamp, if using GU10 LED lamp ensure they are suitable for

Lux to suit, close the hood. Flip the small hood on the PIR down to access the PIR settings, adjust the Time, Sensitivity, and


Turn on the power and test the luminaire


PIR Settings Switch Time - 12 Sec to 4 Minutes Range - 9M when mounted at 4M Minimum On Lux - 9 Lux Viewing Angle - 110°





**Hood Down** PIR Set Up

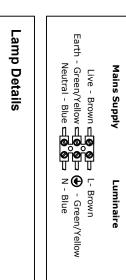

 



E-mail: aftersales@ksrlighting.com KSR Lighting Aftersales: 023 92 674343