

Installation Sheet KSR1325/1326

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP65 ⓘ UK CEE ⓘ 0.3m ⚡ 240VAC~50HZ 8.5W

These fittings are Class I and must be Earthed

Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply. Any faulty, broken or damaged luminaires should be replaced immediately. KSR will not accept responsibility for any claims arising from a poor installation. Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -20 ~ +40°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

General Maintenance

These products are suitable for external use, general maintenance and cleaning should be performed at least quarterly. Clean product outer using a damp cloth, do not use abrasive cleaners as this may damage the finish. After any maintenance, remember to check all seals are intact. Always switch off mains supply before servicing. Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing. To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit. At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.


Installation Procedure

Familiarize yourself with the luminaire and ensure the power is turned off before installing the fitting. Ensure the ground into which you want to install the spike light is sufficient to support it. Push the spike into the ground until you reach the base of the luminaire bracket. Using a suitable IP rated connector (Not supplied) terminate the wiring L-Live (Brown), N-Neutral and E-Earth (Green/Yellow) Adjust head section by loosening the two nuts either side of the head section, point in the desired direction, grease and tighten the bolts. Turn on the power and test the luminaire.


Optional KSR1326 Visor Accessory

If using optional KSR1326 Accessory remove the 4 x Allen bolts securing the cover to the main body. Now with the bolts removed attach the visor accessory to the front of the lens and proceed to fasten the 4x Allen bolts initially removed. Ensure when securing visor to body that bolts are fastened fully to maintain IP rating of luminaire.

Note: This luminaire requires a 240V AC supply, no external driver is required.

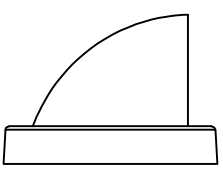



KSR1326 Hood Accessory

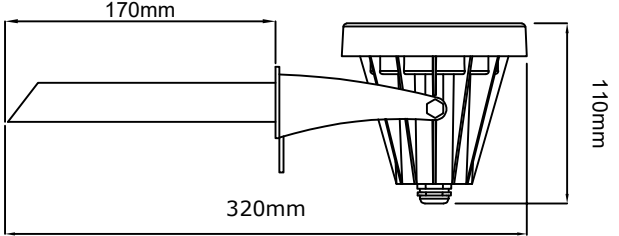

Seron ⓘ LED Spike Light

 Available finish:- Anthracite Finish

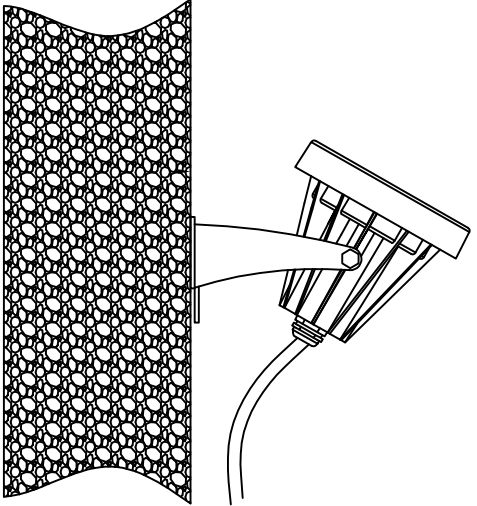

Lamp Details	
	8.5W Integral LED Module 4000K Neutral White 568 Lumens CRI: ra82
The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced	

This product contains a light source of energy efficiency class G

KSR Lighting Aftersales: 023 92 674343
E-mail: aftersales@ksrlighting.com

